


TAPING INSTRUCTIONS

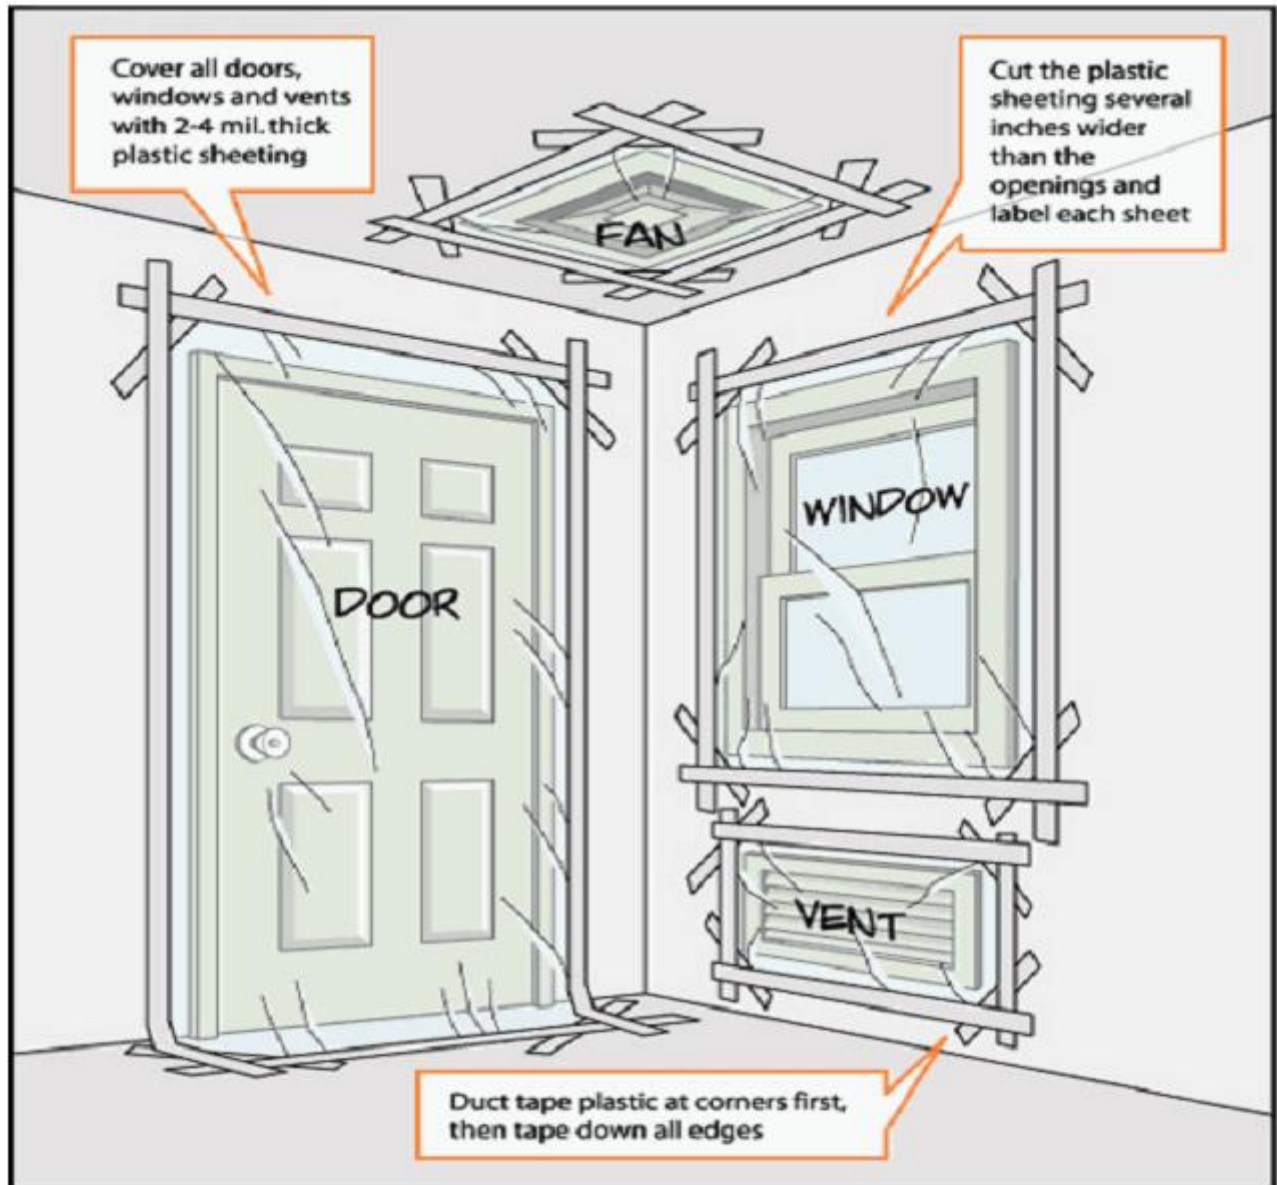

TAPE PLASTIC IN THE FOLLOWING ORDER. OVER LAP THE TAPE.

- 1) TAPE TOP CORNERS.
- 2) TAPE BOTTOM CORNERS.
- 3) TAPE TOP EDGE.
- 4) TAPE SIDES.
- 5) TAPE BOTTOM.

****WHEN SEALING THE DOOR**:**

PLACE TOWEL UNDER DOOR - ENSURE A TIGHT FIT, FOLDING TOWEL IF NECESSARY.

PULL DOOR SHUT AND LOCK THE DOOR.

POUR WATER ON TOWEL - USE ONLY THE AMOUNT NECESSARY TO MOISTEN TOWEL.

USING TOO MUCH WATER WILL NOT ALLOW THE DUCT TAPE TO STICK TO THE FLOOR.

CONTINUE WITH THE ABOVE TAPING PROCESS.

MONITOR SEALS AND RE-TAPE IF NECESSARY.